

BARN3



Thank You!

We hope you enjoy your new OX9! Every Barn3 pedal is designed, manufactured, tested, and boxed by hand in Klecknersville, PA by us (the dudes to the right). We're three guitarists with a goal of making life easier for other guitarists and your support helps us do just that.

Be sure to read this manual before installing your OX9 and check out Barn3.com for more installation and programming videos.

Thanks again and good playing!

BARN3 Ryan, Garrett, and Tom

Installation and Setup

© Barn 3 LLC 2014, Klecknersville, PA 18014 | Eventide® is a registered trademark of Eventide Inc

Check out our other products at Barn3.com




Ergonomic, two button auxiliary switch for Eventide factor pedals.

Tap tempo pedal with the image of our favorite inventor.

1. Remove Screws


Remove the four outer mounting screws from the bottom of your Eventide.

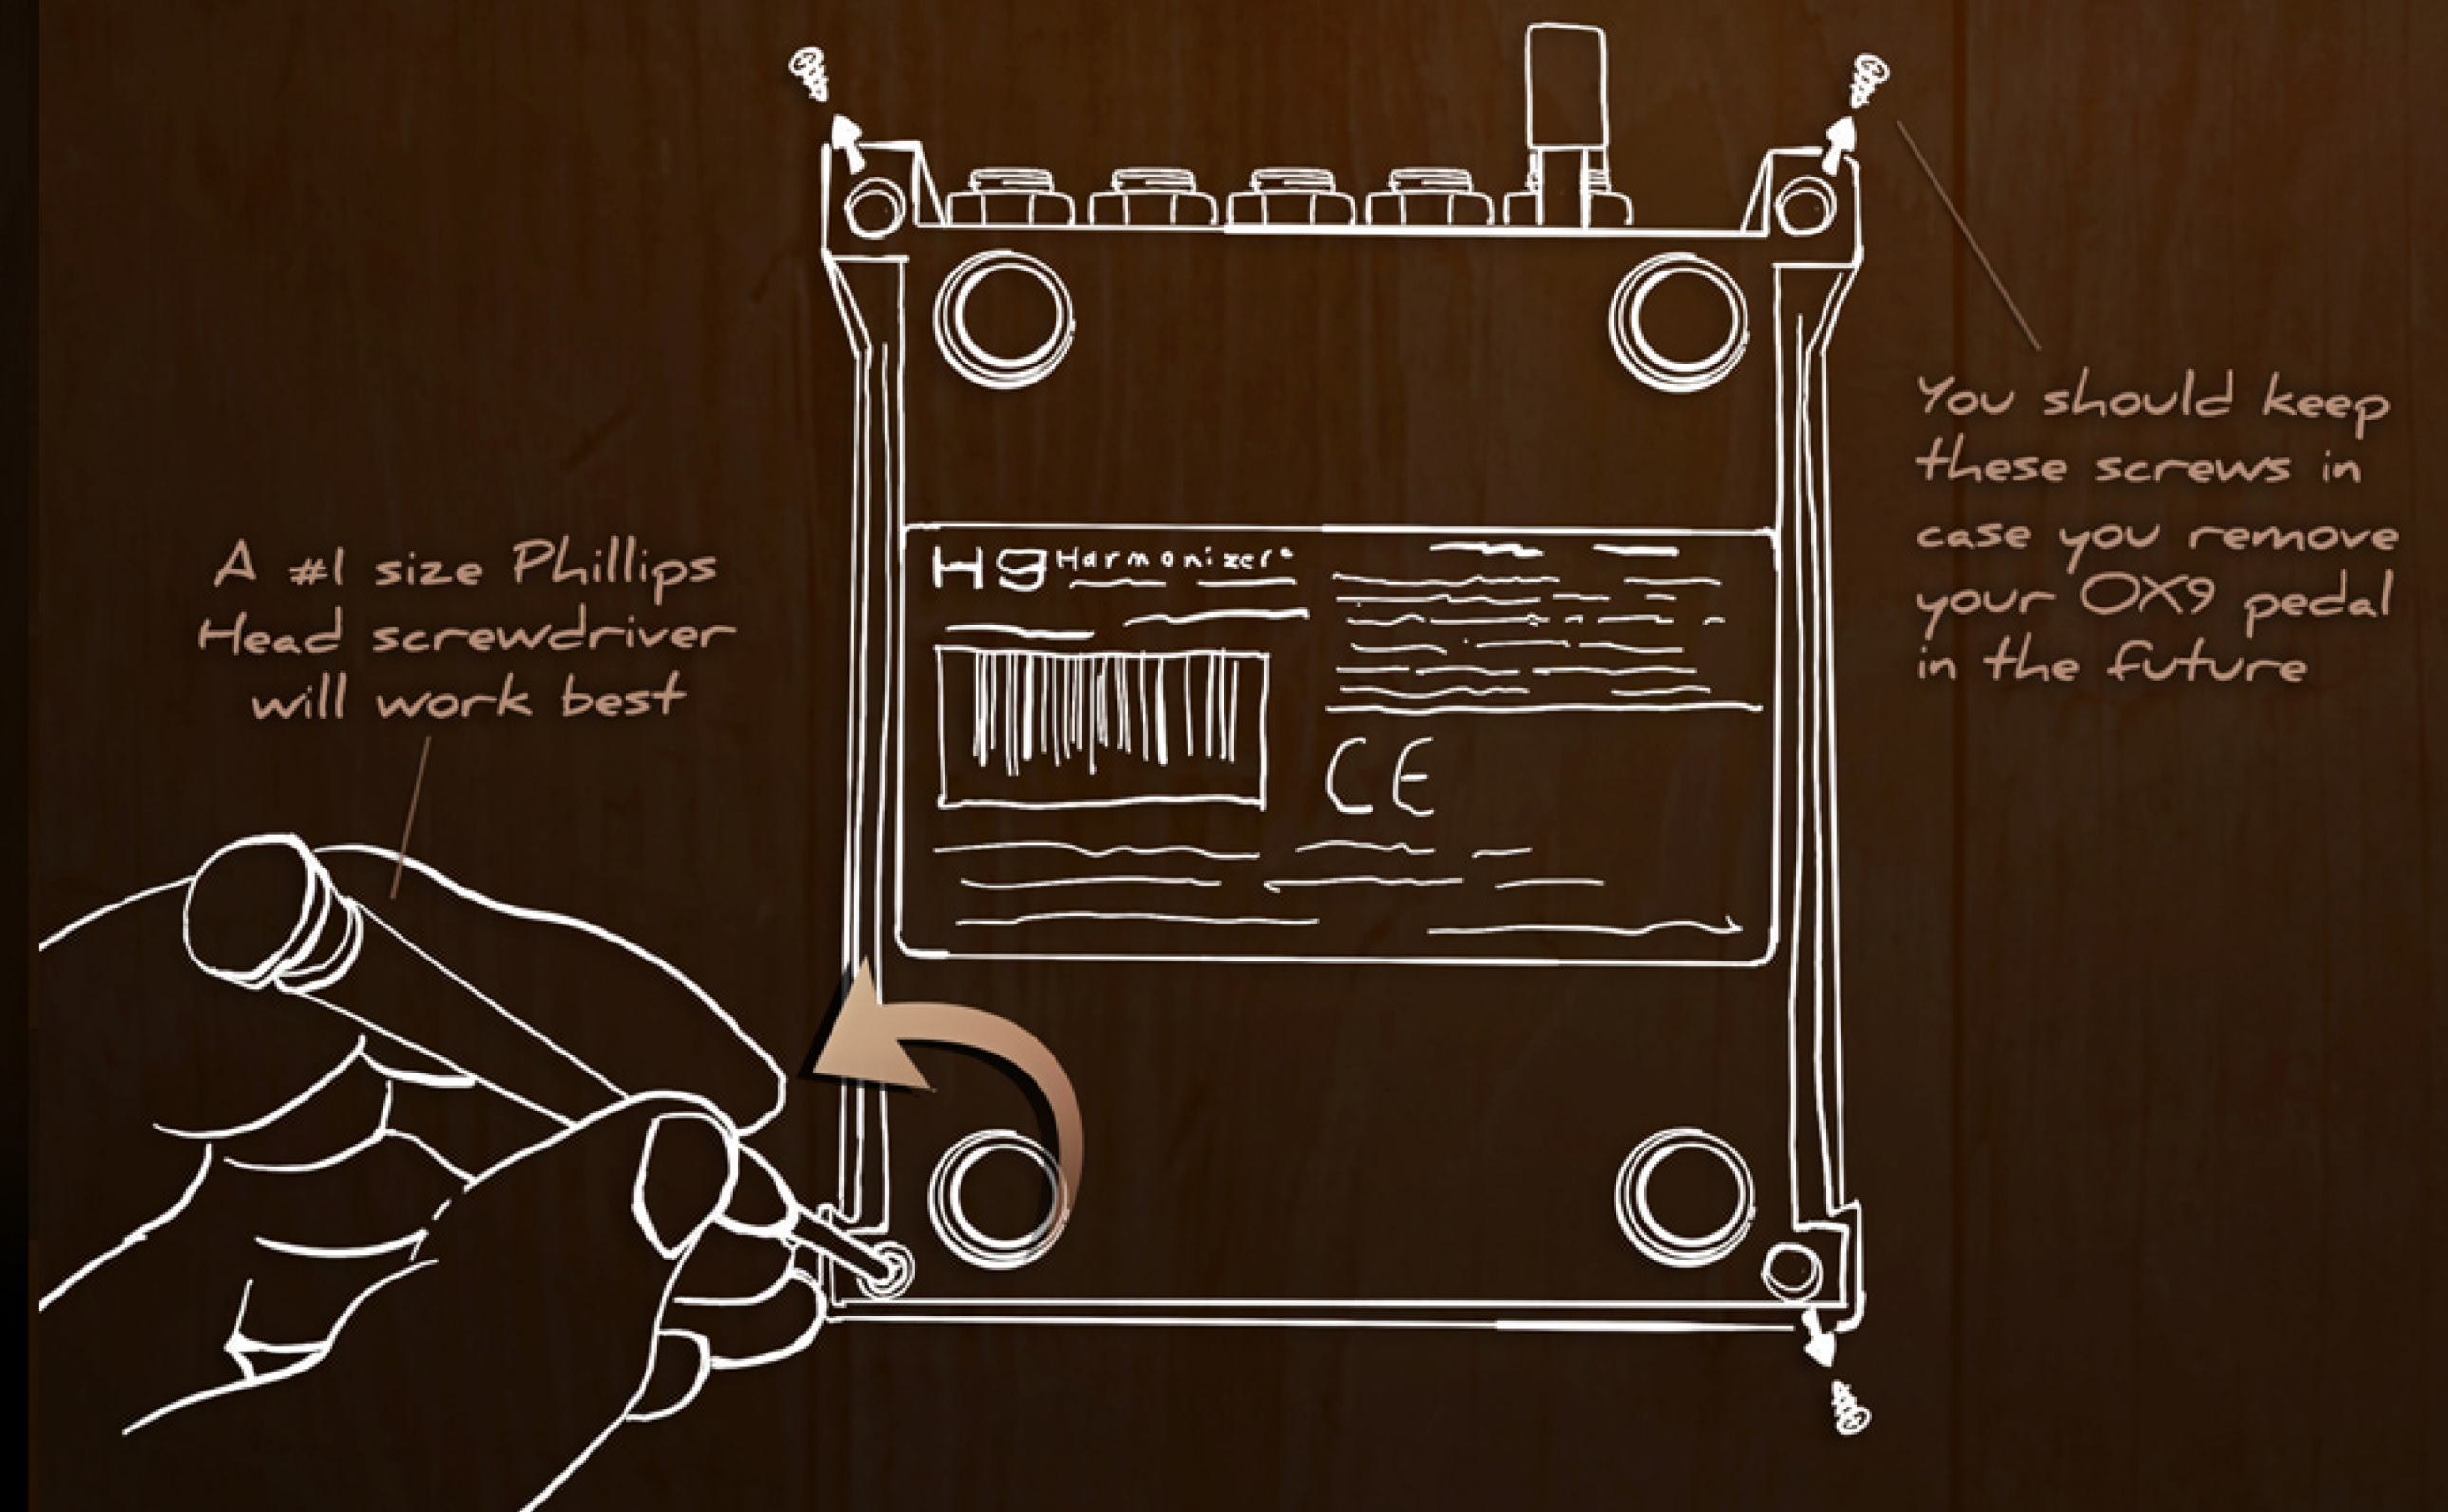

2. Connect OX9 Pedal

While holding OX9 at slight angle to your H9 (as illustrated below), plug OX9 jack into your H9's EXP input. Lower H9 into position on OX9 plate.


Wire is precisely cut, be sure to install at an angle like the illustration

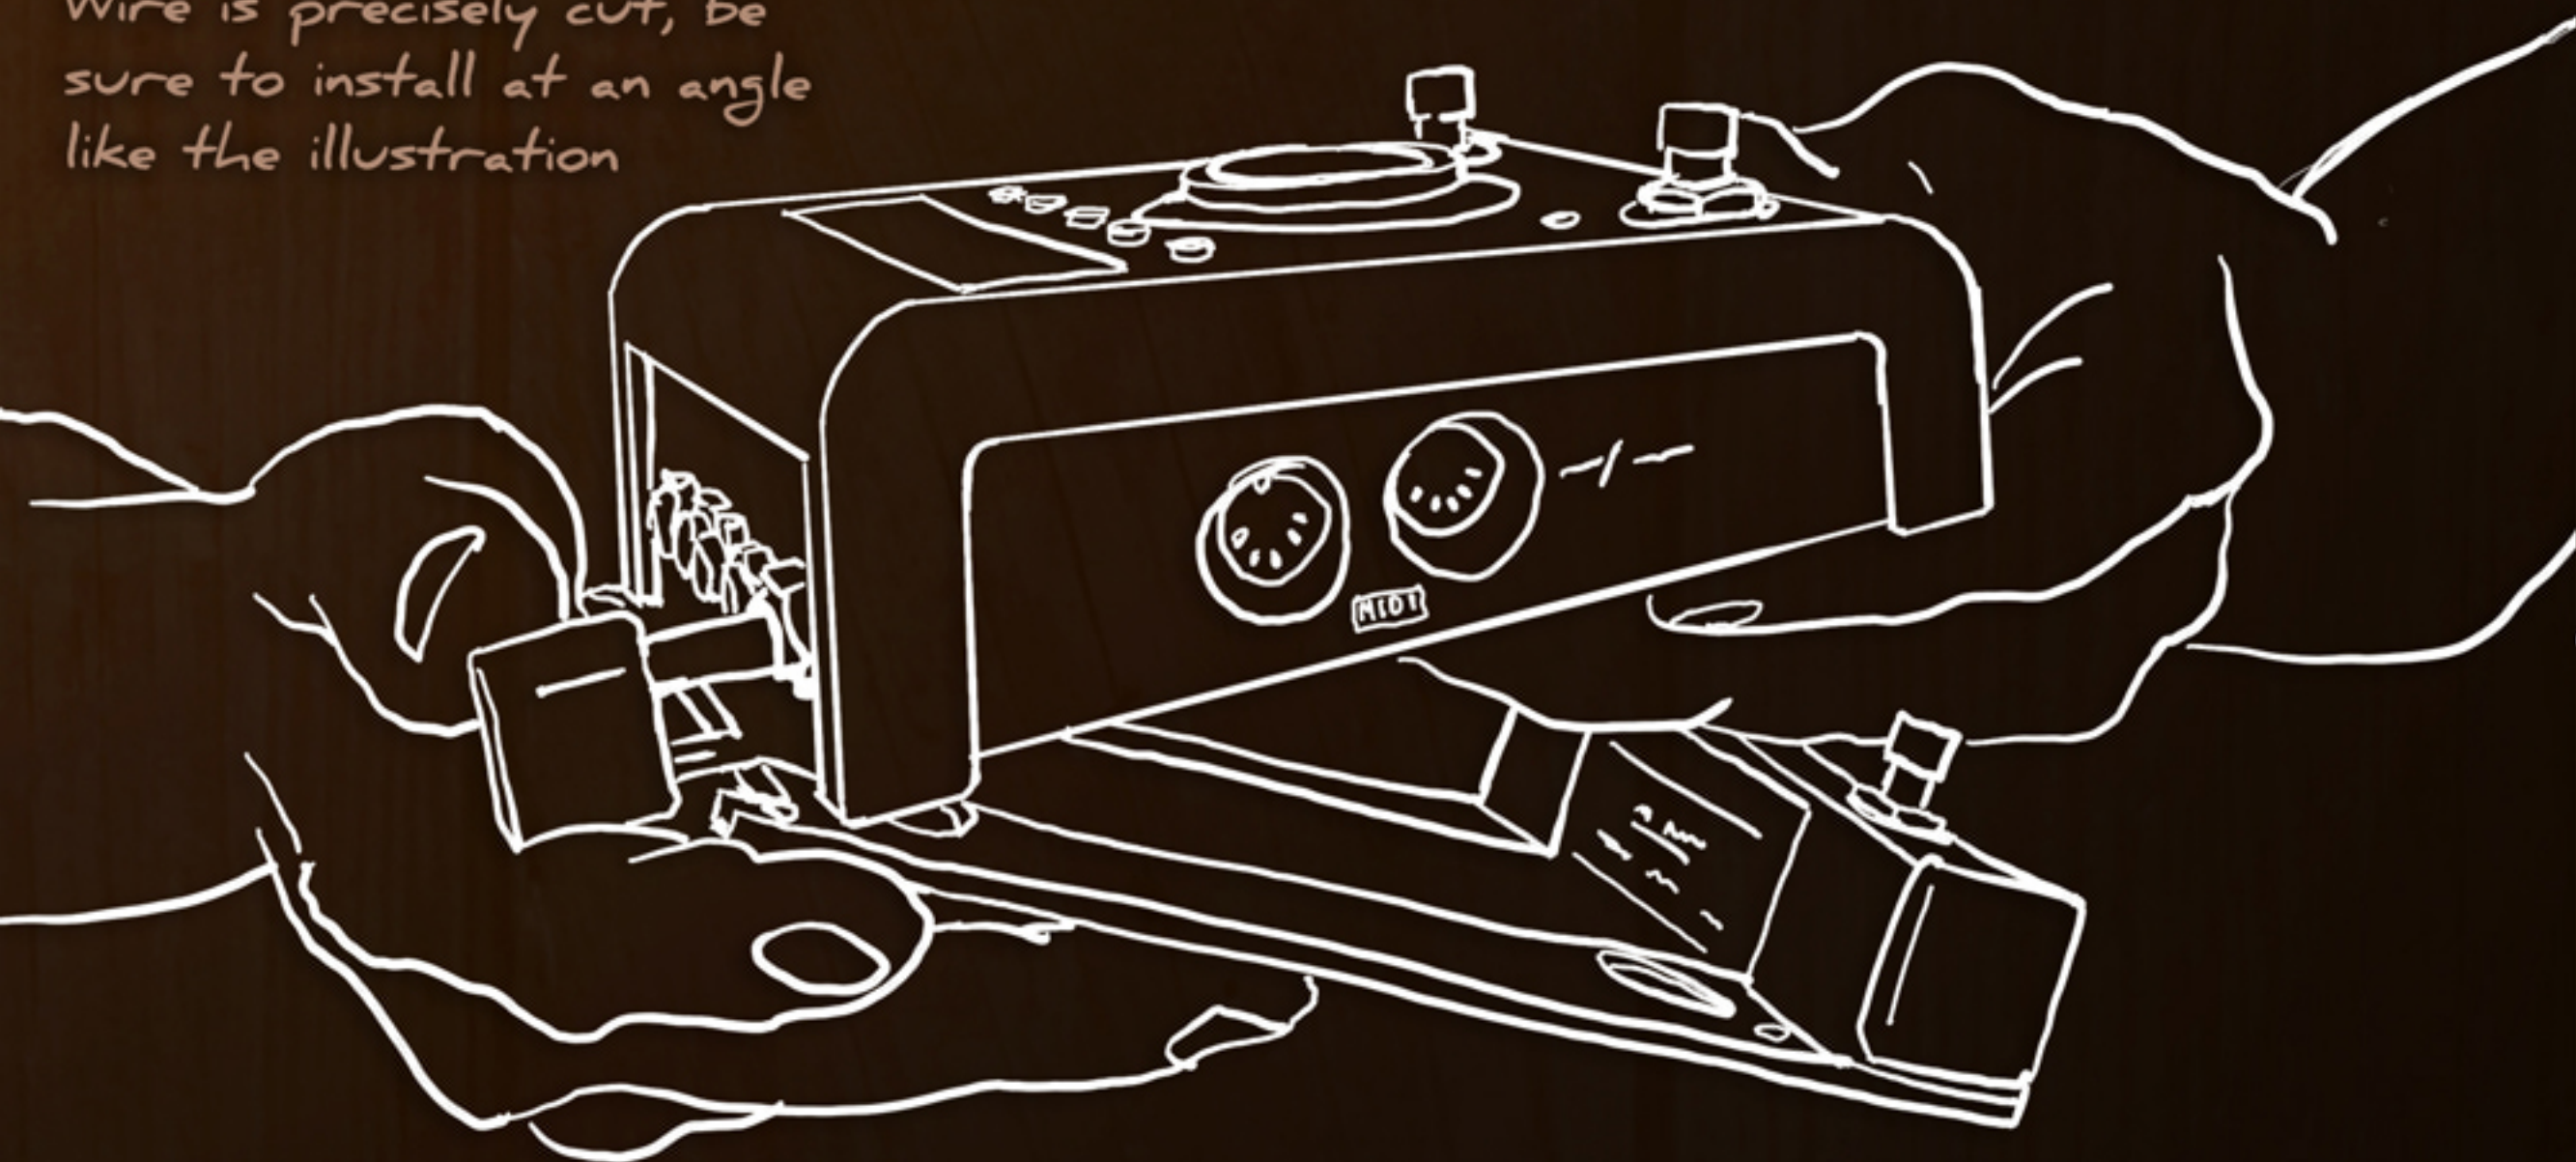

3. Install New Screws

Insert four screws (supplied) through the OX9 bottom plate and into open H9 screw holes. Fully tighten the screws only after all four are in place.


A #1 size Phillips Head screwdriver will work best

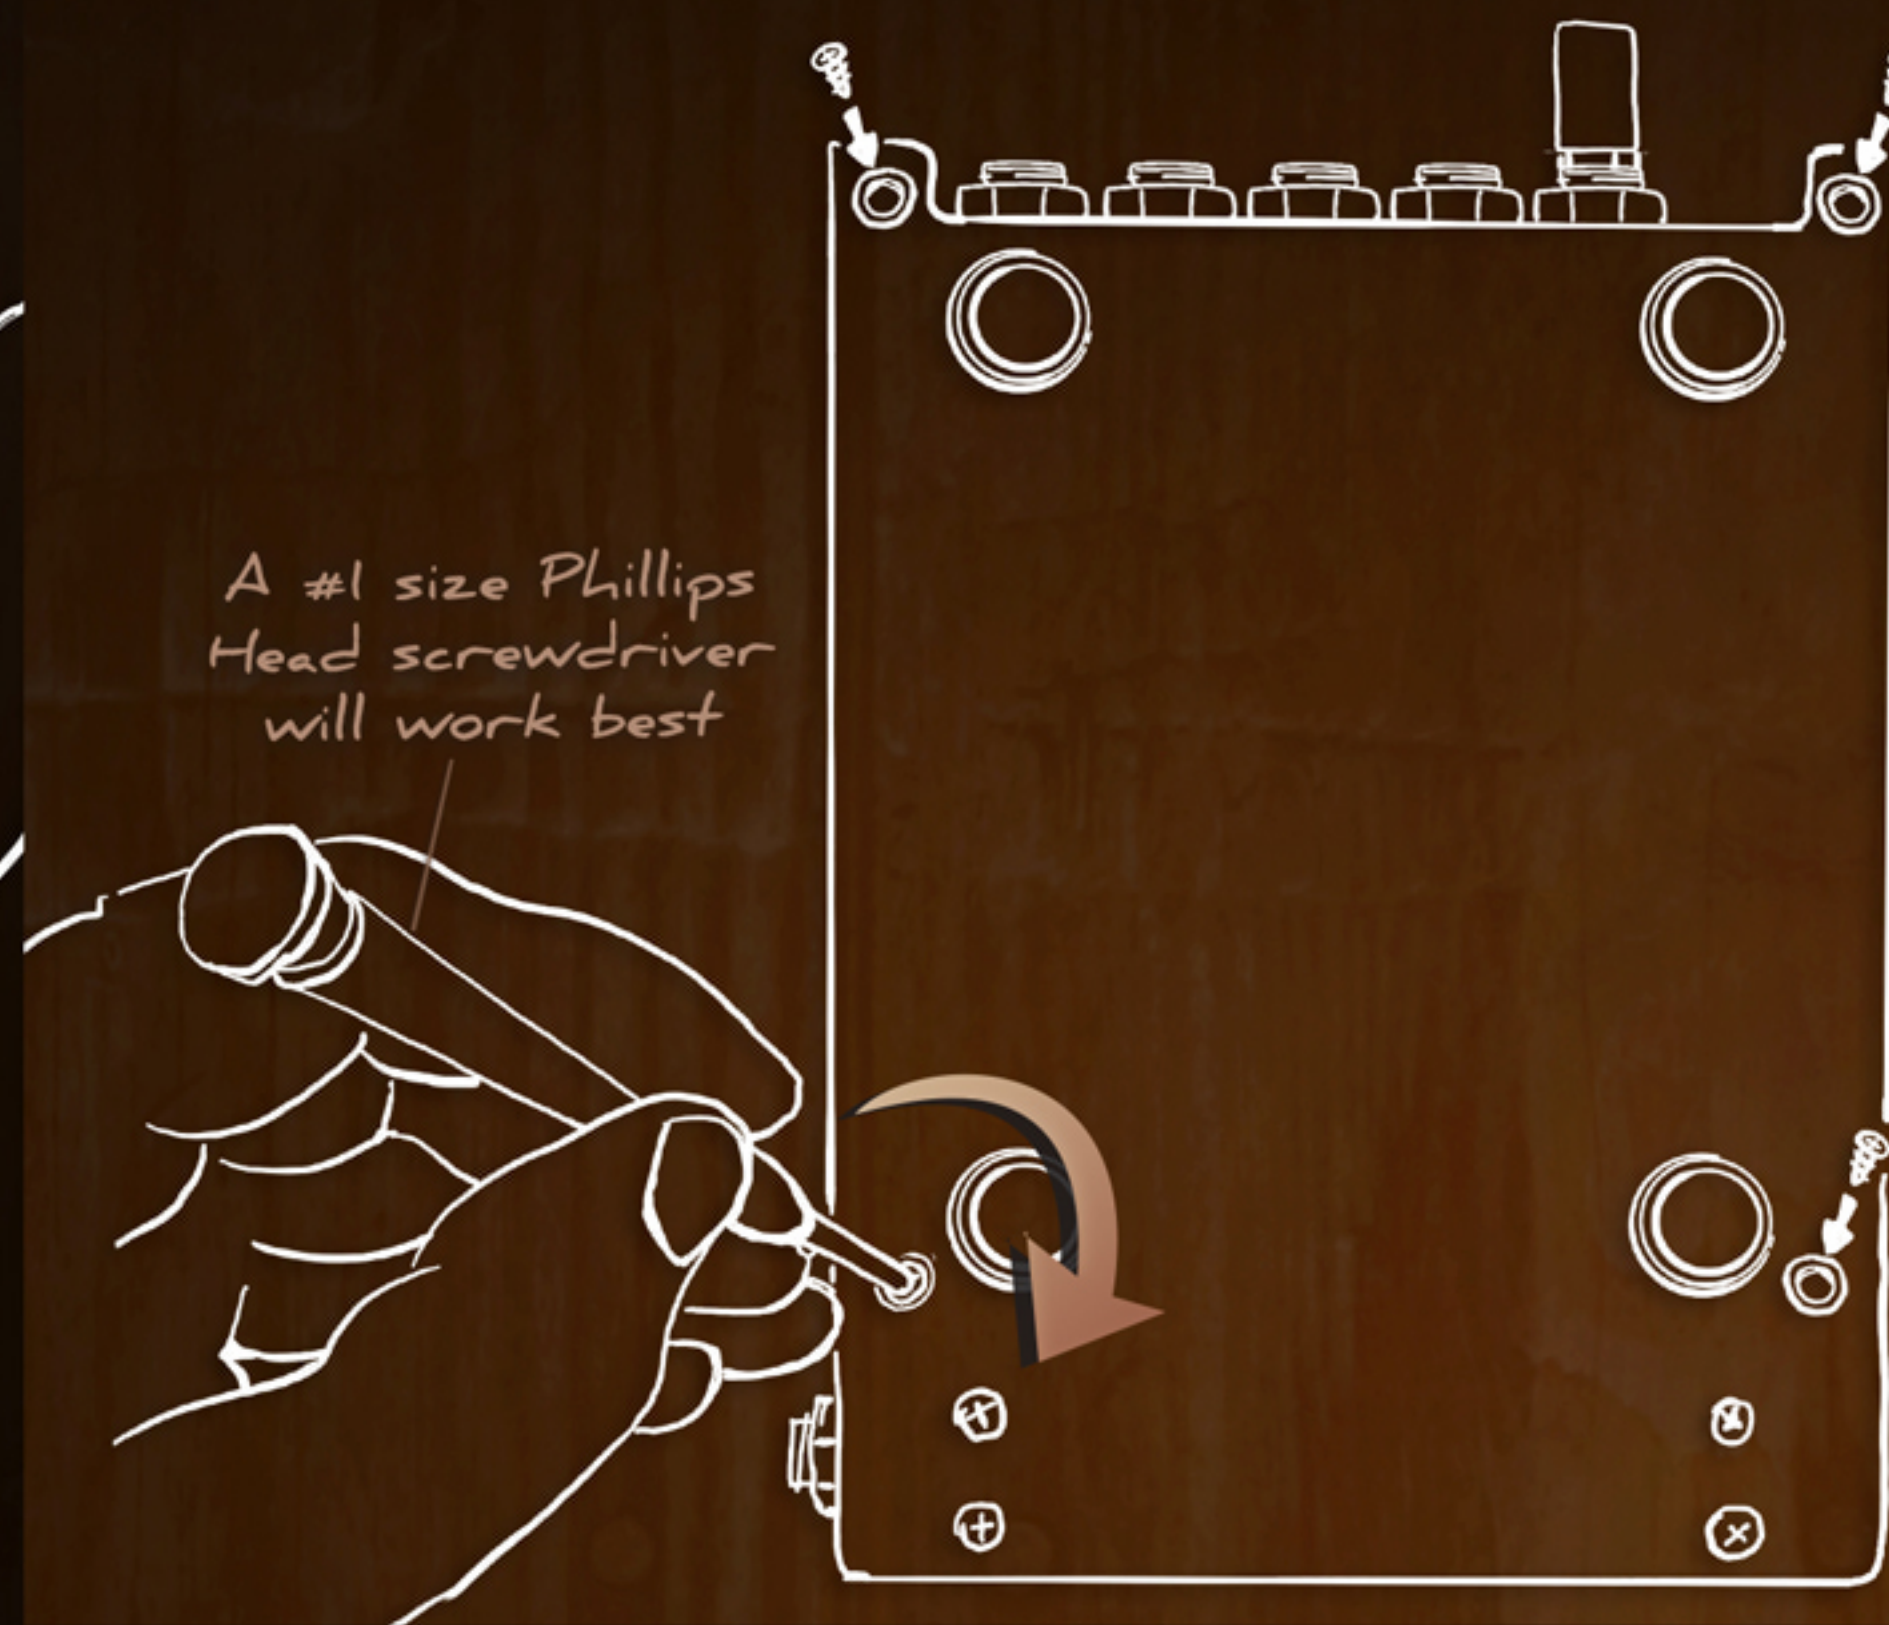

4. Attach Third Footswitch or Expression Pedal


If you intend on using a third footswitch or expression pedal, connect it to your OX9 using a standard 1/4" mono cable.

Third Footswitch

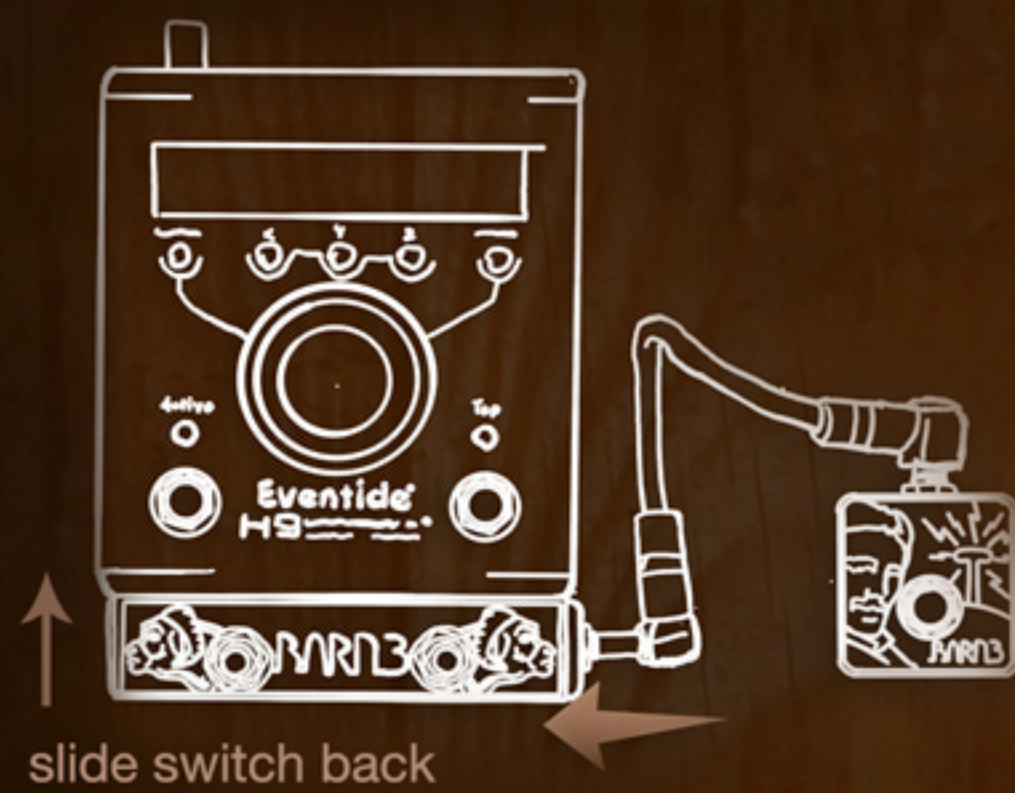

When using a third footswitch switch, keep the slide switch on the left end cap of the OX9 in the back position. This will ensure that all three footswitches have unique functionality.

Expression Pedal

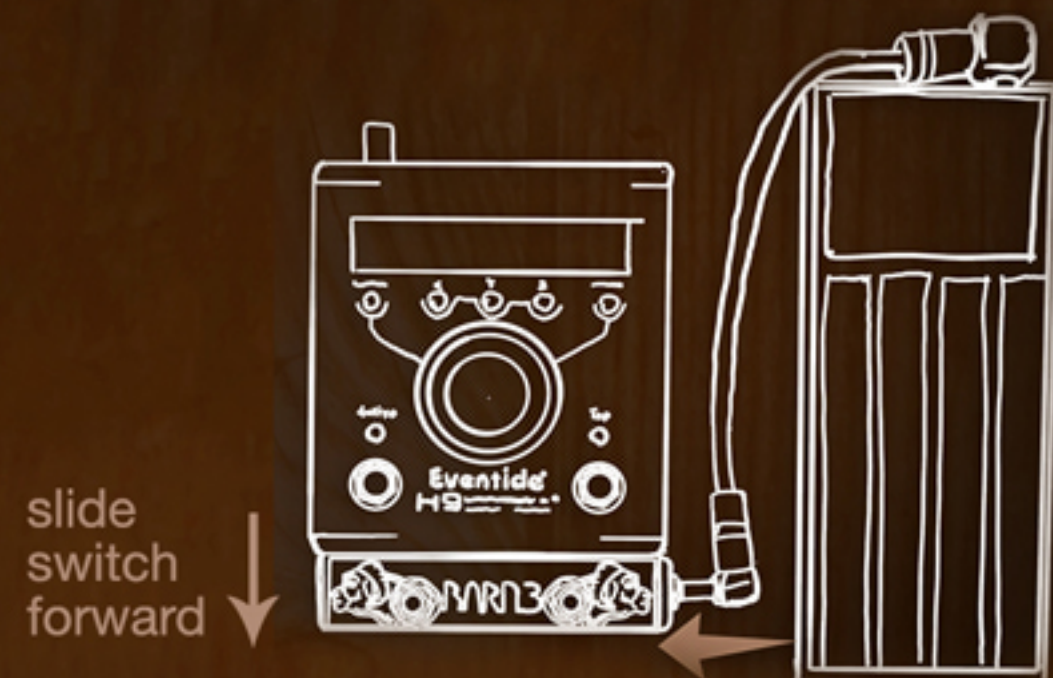

When using an expression pedal, the H9 only allows you to have one additional auxiliary footswitch. The OX9 allows you to get the most out of this configuration by turning the unused footswitch into a flex button for your expression pedal. Move the slide switch on the left end cap of the OX9 to the forward position to allow your right OX9 footswitch to engage heel position functionality of your expression pedal.

If you don't move the slide switch to the forward position, the right footswitch will engage left footswitch functionality and expression pedal at heel position functionality simultaneously.

5. Program H9

OX9 Programming with H9 Control App (if you aren't using the control App, refer to your H9 owner's manual for auxiliary switch programming instructions).

- Open your H9 Control App
- Click "Pedal" tab (at the bottom)
- Click "General Settings"
- Click "Use Expression Pedal, Aux Switch, or Both" and select appropriate configuration for your setup
- Click "back" to move back to "Pedal" tab
- Click "Aux Switch Mapping"
- Click functionality you'd like to assign (ex. Increment Preset)
- From drop down menu select aux switch you'd like functionality assigned to. Aux switch assignments are based on slide switch orientation. See illustrations below for detailed overview.

Third Footswitch Attached or No Attachment



Expression Pedal Attached

